

Servicing Guidelines :

Open the cover of chamber all grinding parts can be cleaned with a brush in couple of minute and the pulverizer is ready for next grinding. If required, the grinding chamber can also be washed with water. Remove the cotton balloon and the screen, close the cover tightly and start the grinder. Now pour a bucket or two of water into the hopper. The grinding parts will be flushed with the water and cleaned. Continue running the machine for a few more minutes as the draft of the fresh air sucked into the grinder will dry it. The beater when worn out can be removed and reserved by removing the cur clip lock holding to the rotor pins. When both the edges are worn out, they can be sharpened on an emery stone, to be used as new. In addition, when completely warn out, can be replaced the equal weight and refitted.

Accessories :

SR. NO.	DESCRIPTION
1	Mild steel fabricated slotted basement & rail wheels for TW-4 pulverizer
2	Mild steel fabricated slotted basement wheels for TW-5 & TW-6 pulverizer
3	Oil bath instead of garish bath for Tw-4 & Tw-4 Super model
4.	Speed reduction mechanism for broken wheat/black piper etc.
5	Stainless steel hoper instated of galvanized for TW-4
6	2 H.P. Single phase, V belt MCB 3 meter cable, Plug top for ready to start for TW-4 & TW-4 Super
7	2 H.P. Three phase, V belt TW-4 & TW-4 Super
8	7.5 H.P. Three phase, V belt TW- 5 & TW-5 Super
9	10 H.P. Three phase, V belt TW-6 & TW-6 Super